


POP UP DISPLAY ASSEMBLY INSTRUCTION

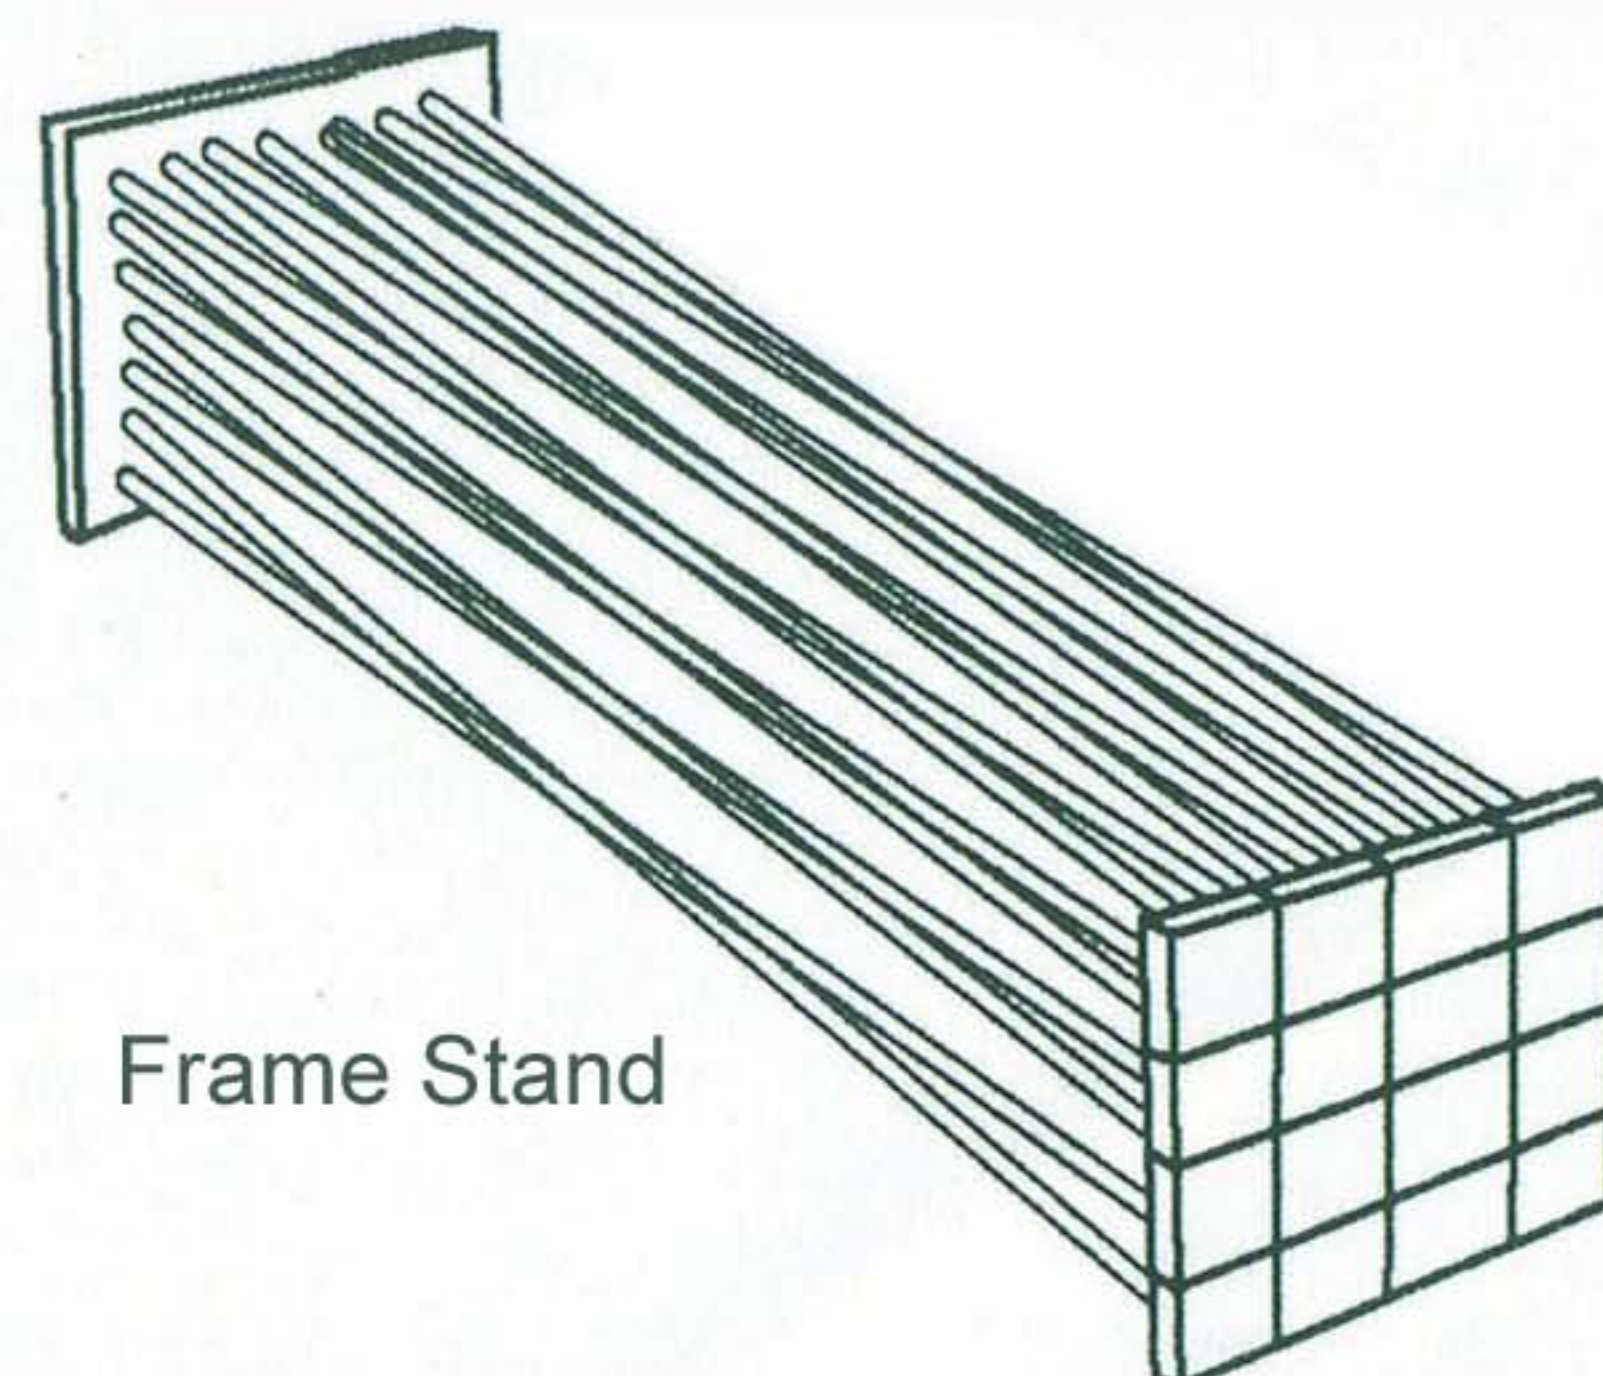


Frame Stand

1 pc



Short Arc Bar

6 pcs

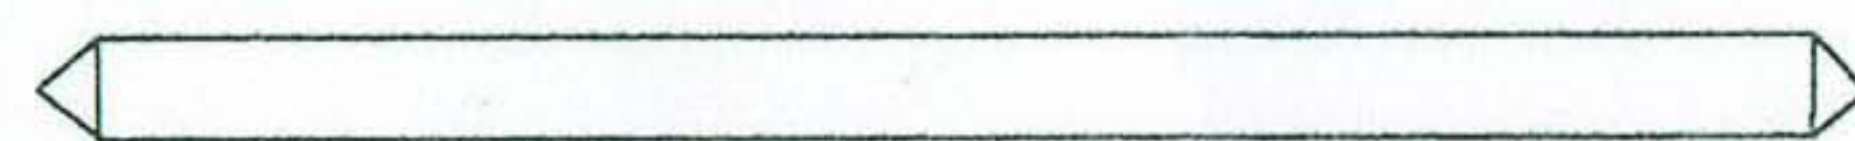

Straight Bar

18 pcs



Semicircle Bar

4 pcs

S9--S10

660 x 2210 mm

End Panel

2 pcs

F1--F4

672 x 2210 mm

Front Panel

3 pcs


POP UP DISPLAY ASSEMBLY INSTRUCTION

1




Remove frame from case and place it on floor. Make sure to open the stand on the FLAT and EVEN ground. Grasp upper ends of frame and pull up and outward

2

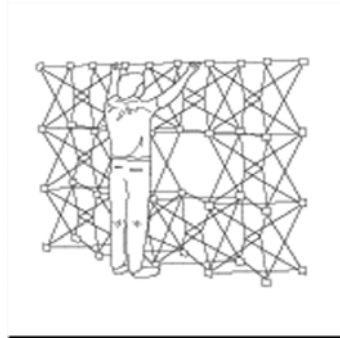


Frame should pop into a fully open and upright position. Expand the unit fully by pulling firmly on the upper cross bars.

3

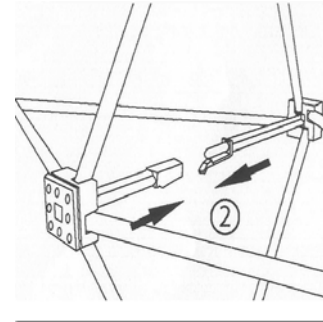


Lock all the gadgets. Secure the stability of the unit by swiveling the locking bars into place on the locking pins

4

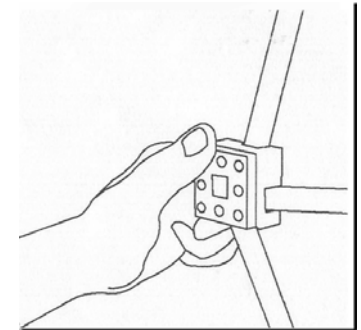

Make sure the white square connectors are in the same vertical way. If not, just twist the white square connector to make them straight.

5

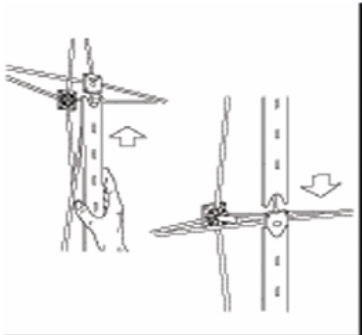


Begin at the bottom and working up, attach channel bars by aligning the cut-outs on the bars with the clear buttons on the frame. (See page 3 for details)

6



Hang the front panels at top, and then attach them to the channel bars by aligning the magnetic strips.

7

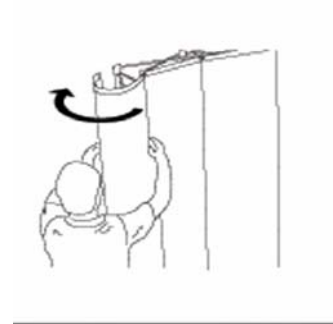


Hang the end panels, curl them around the corners and attach them to the channel bars.

8




To convert the empty case into a counter, wrap the fabric skirt panel around case as shown and Velcro the ends together.

POP UP DISPLAY ASSEMBLY INSTRUCTION

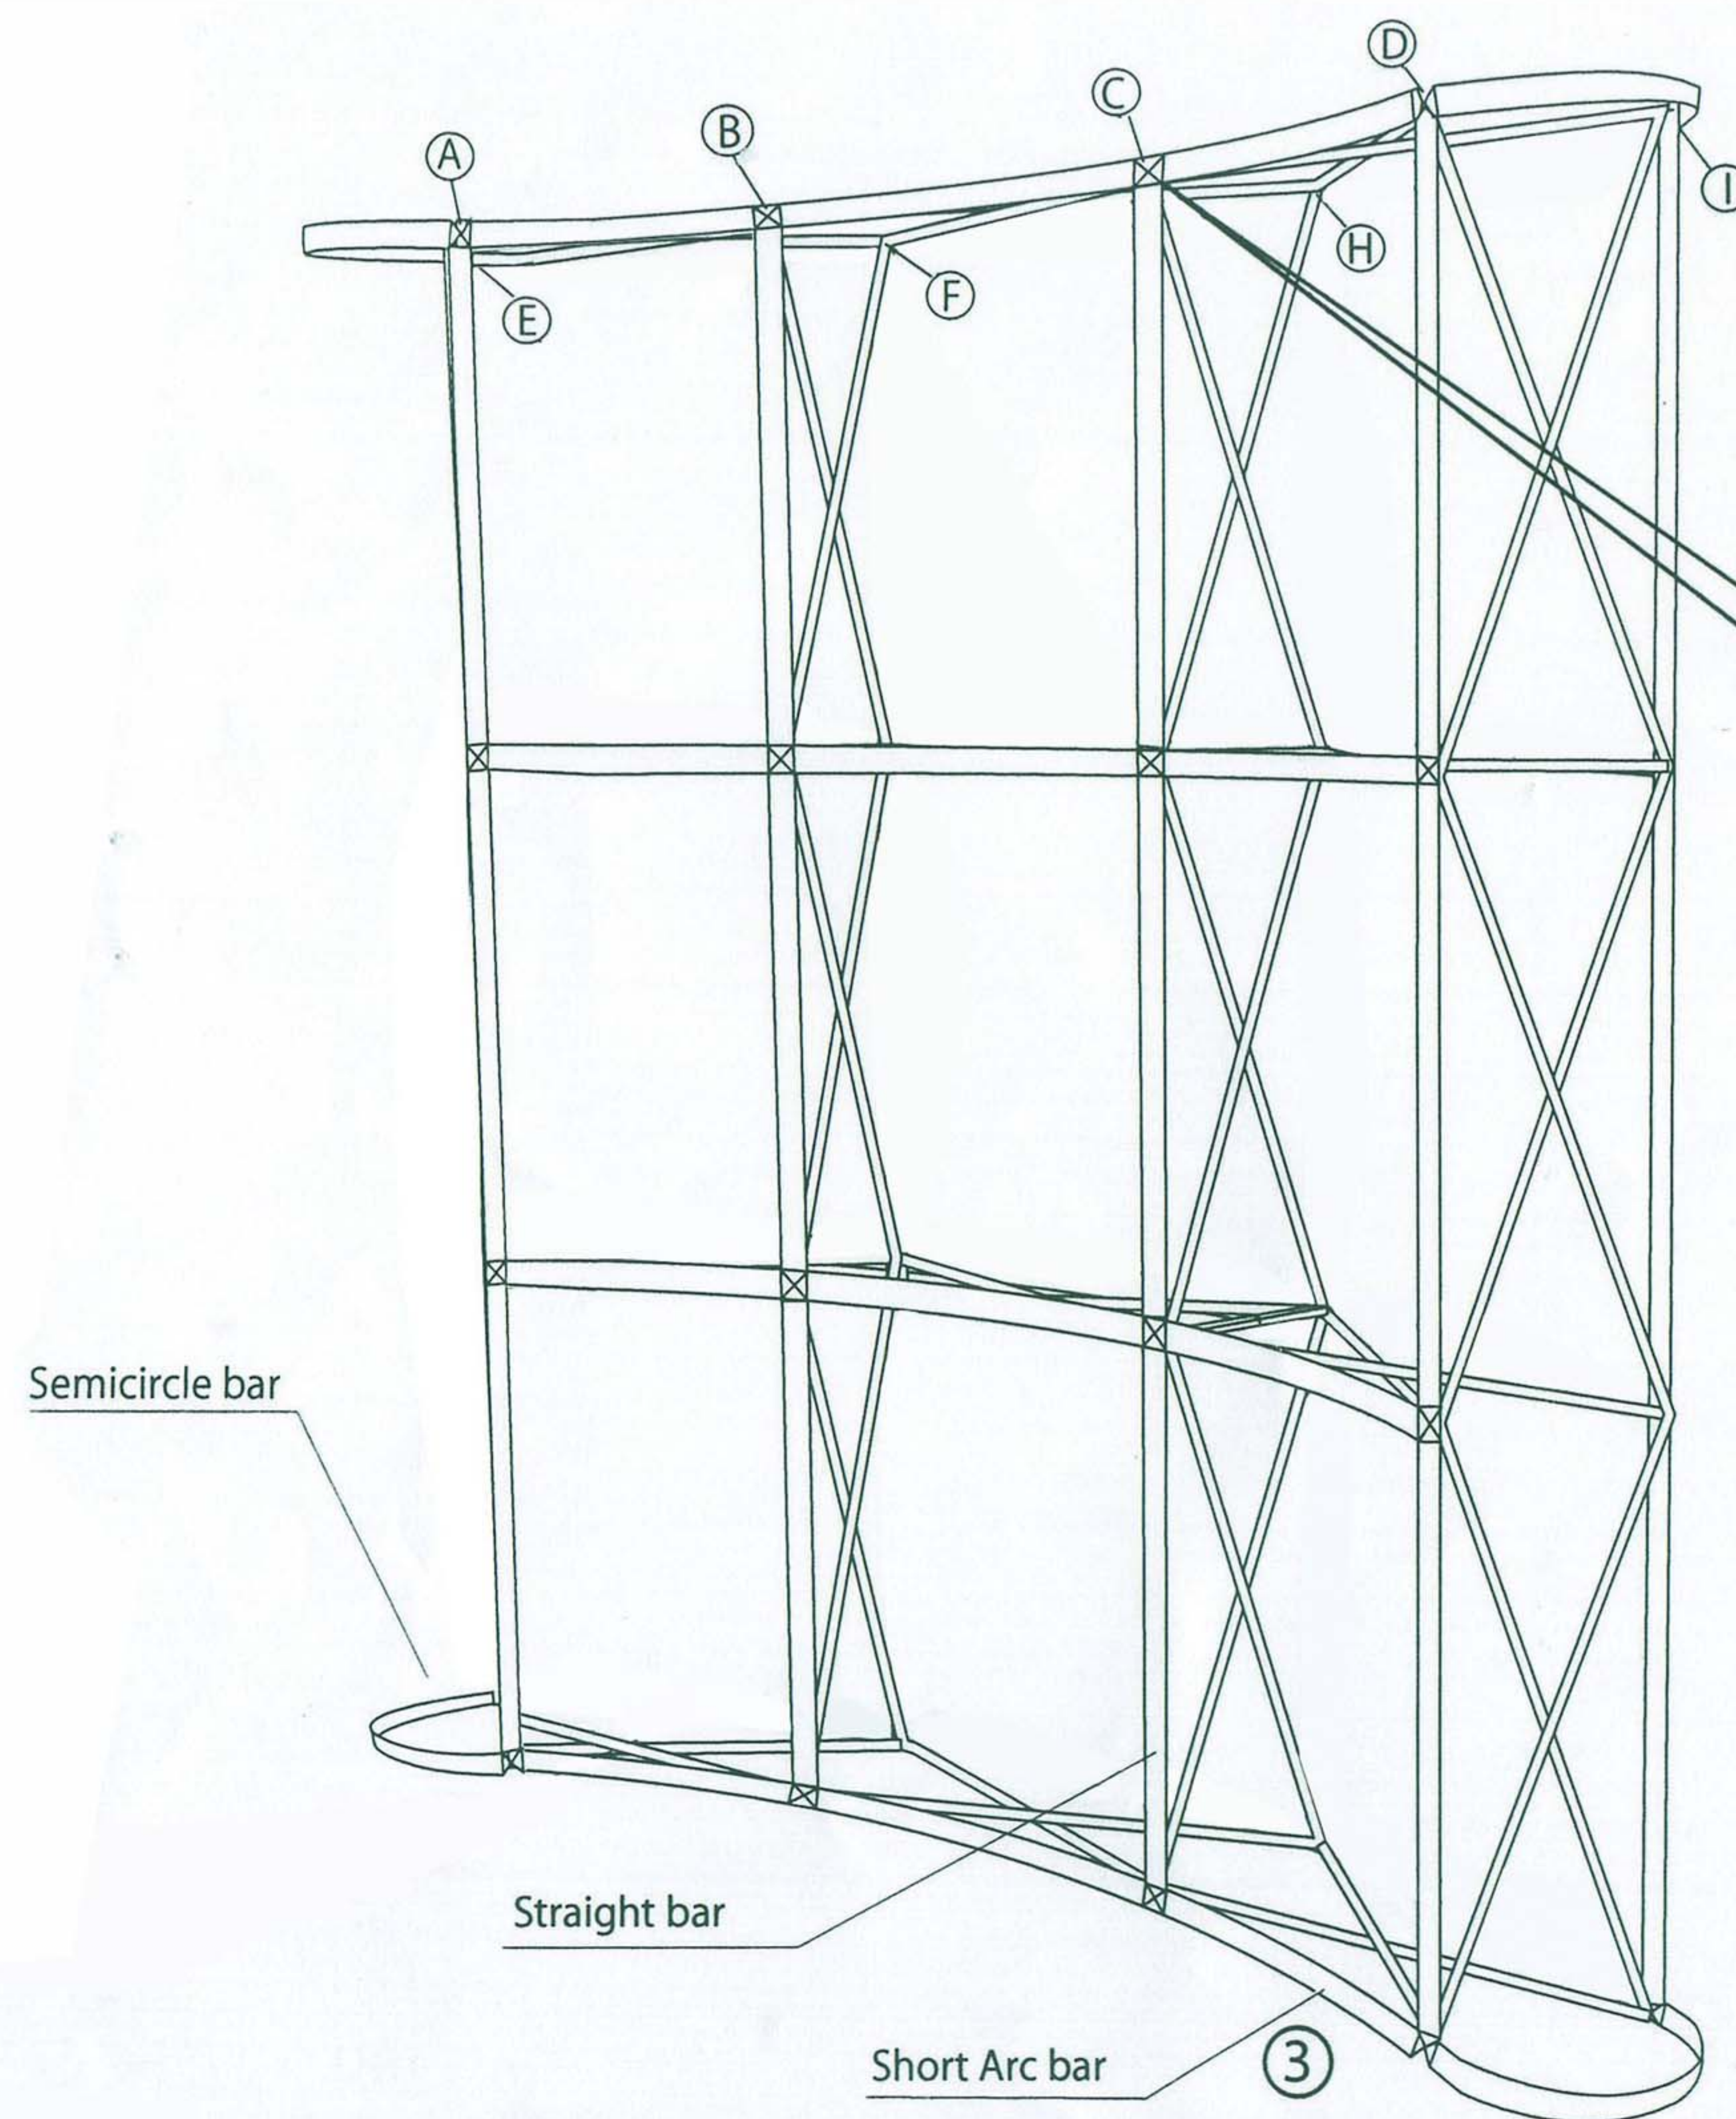


NOTED: Short arc bars are for inside curve use
 Long arc bars are for outer curve use
 Straight bars are for vertical use on both sides

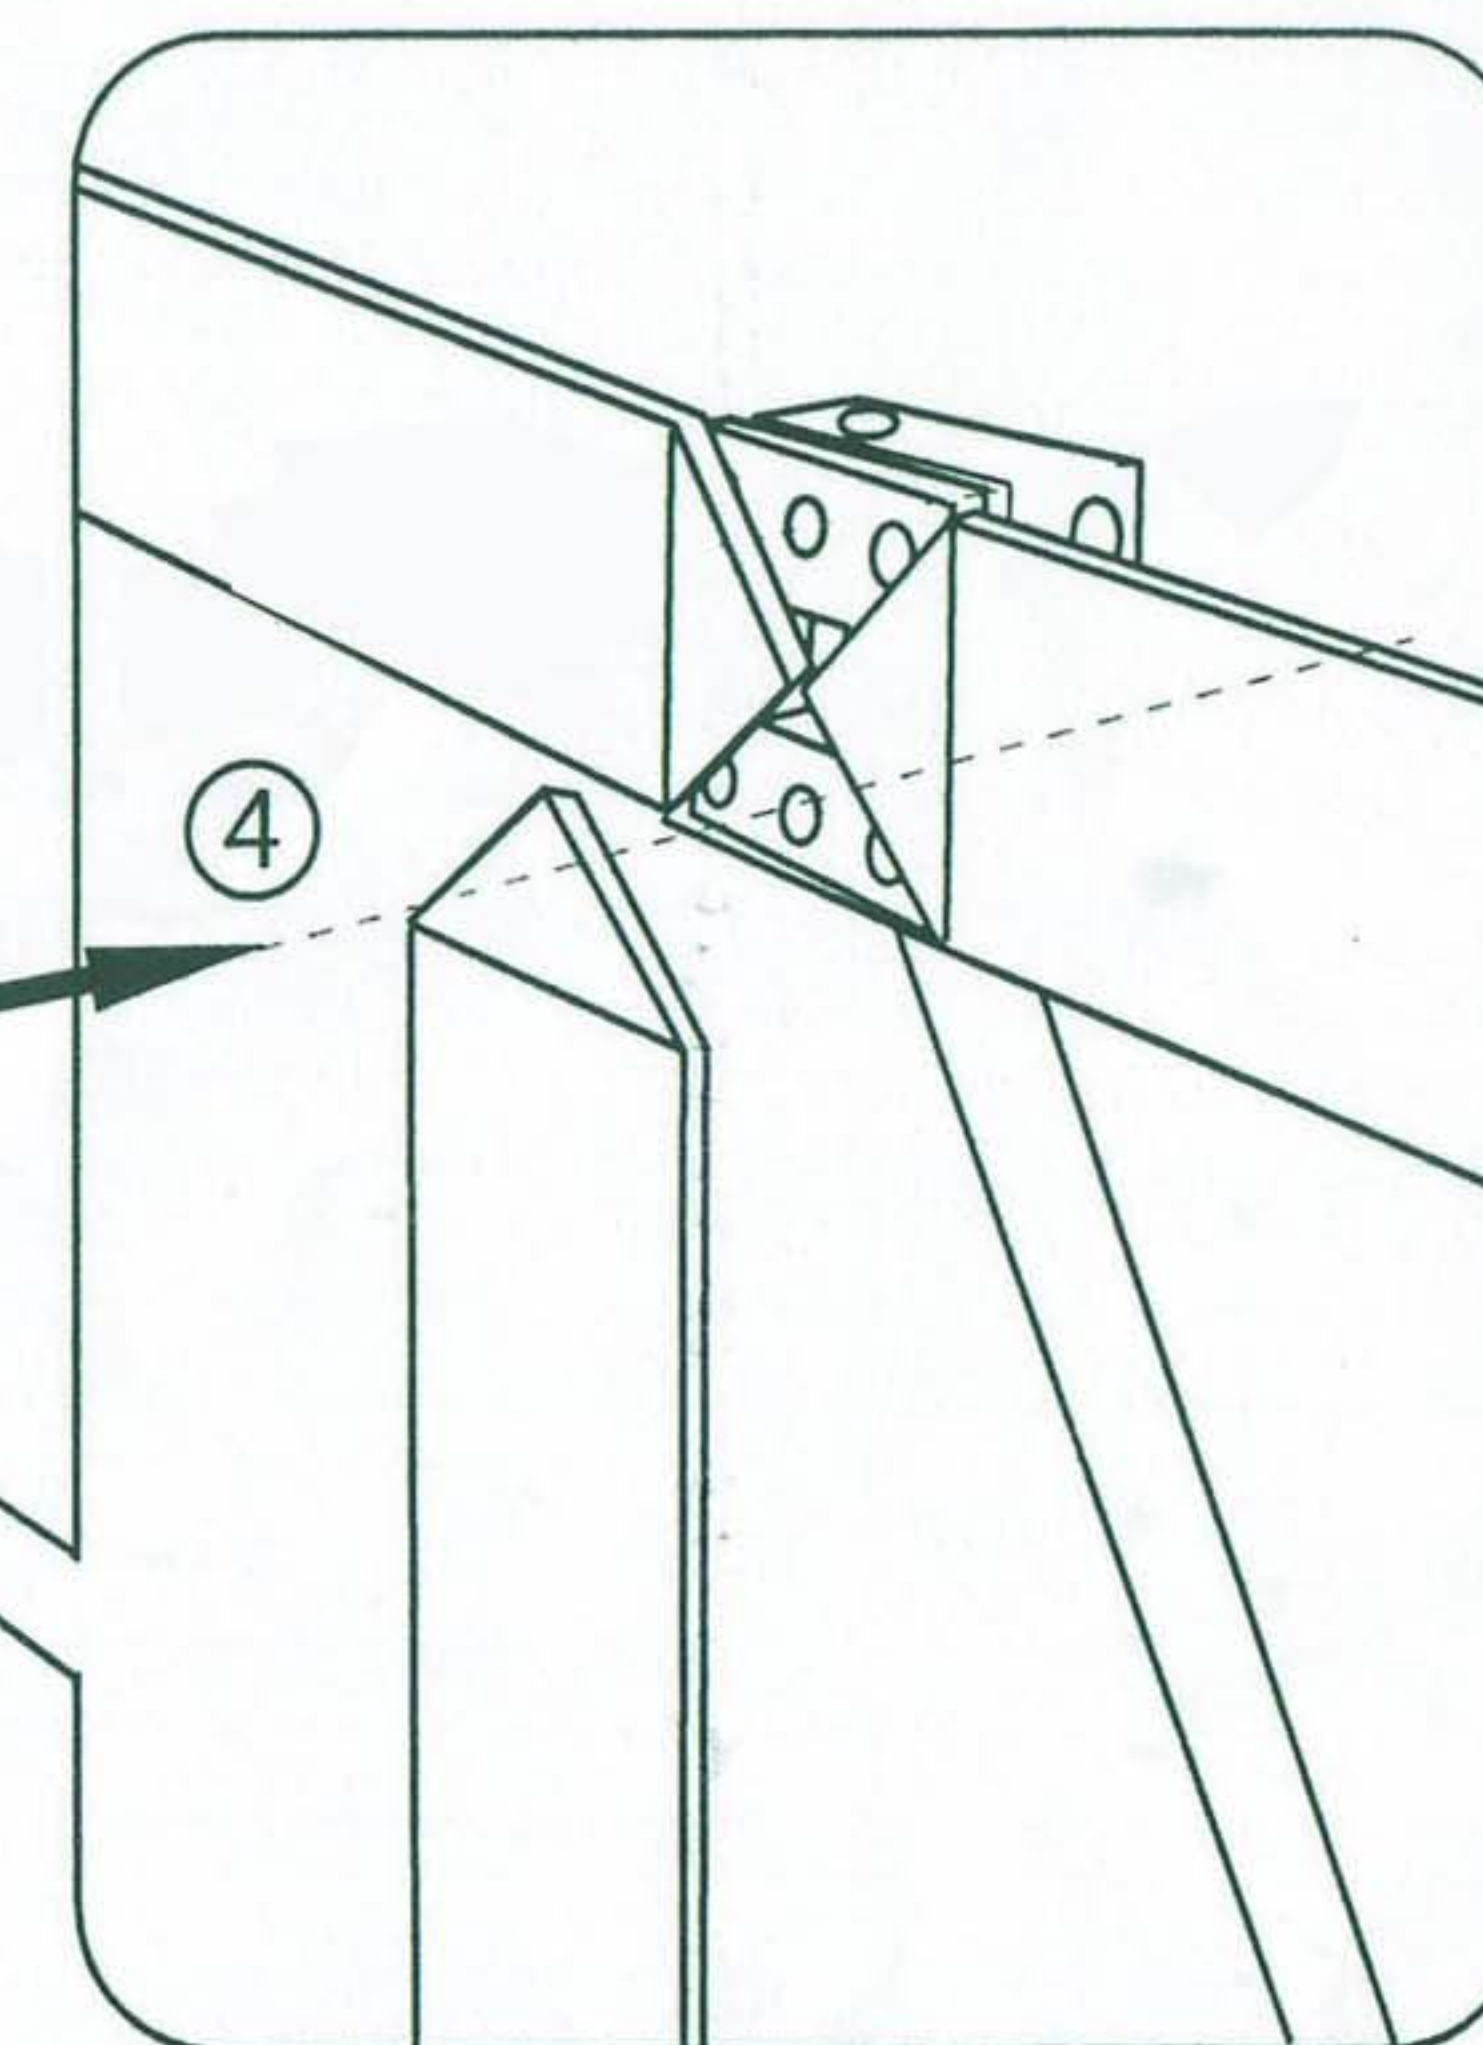

Plug stopper into ④ points

ONLY these two holes
 for horizontal bar

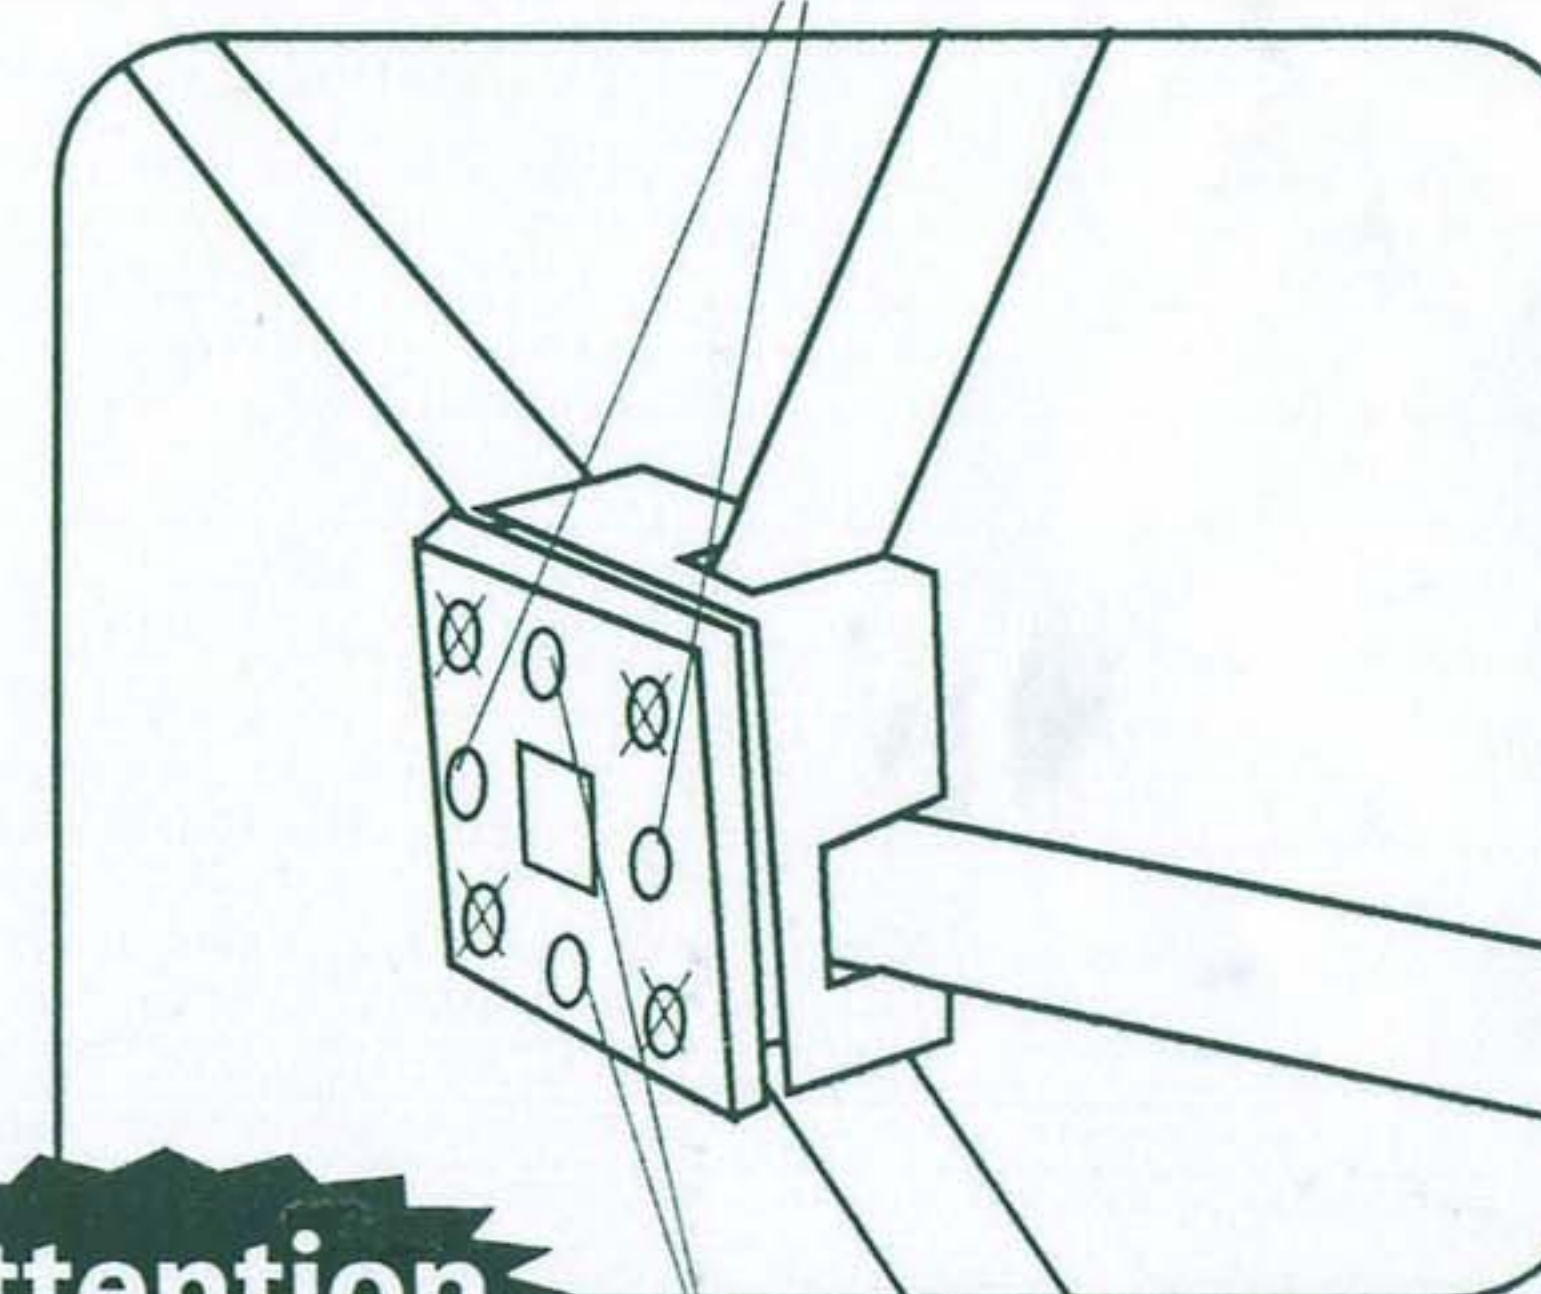

Attention

ONLY these two holes
 for vertical bar